


# Pickleball Tutor Plus Control Panel

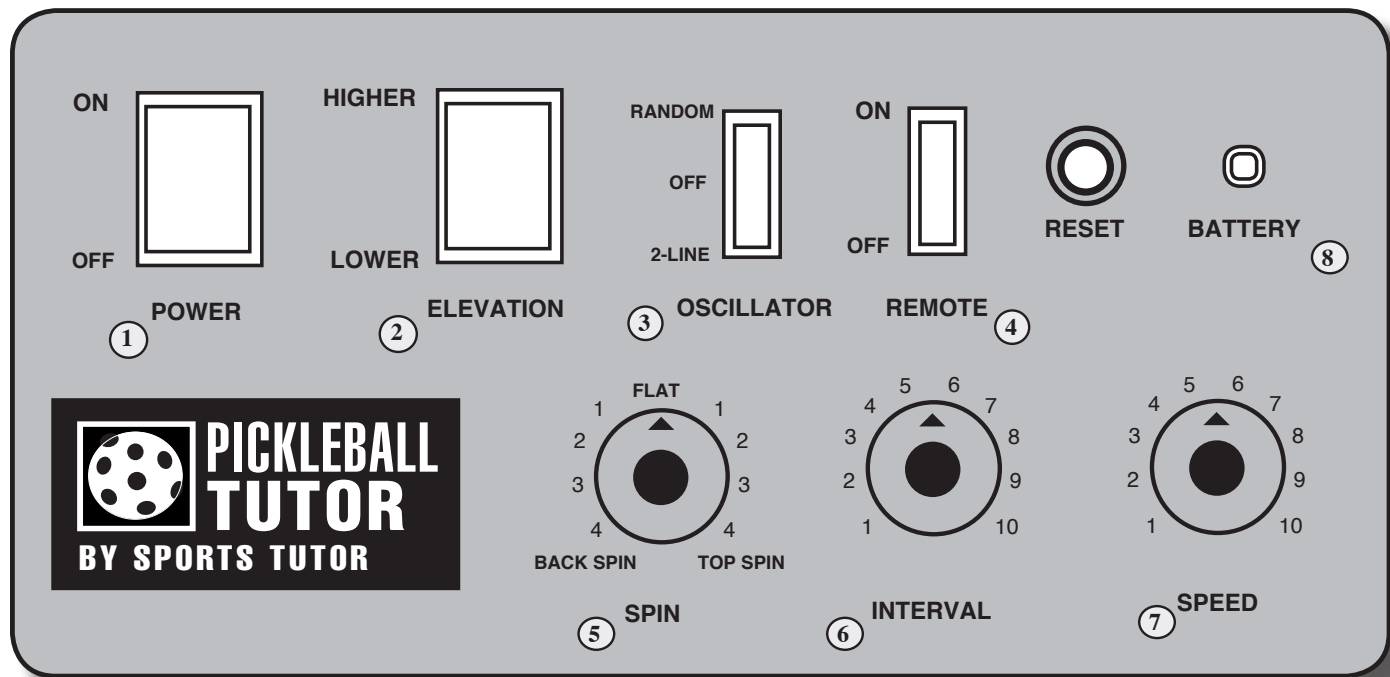

Panel shown with electronic elevation, 2-Line oscillation and remote control options.

- ① **POWER** - Pushing to the 'ON' position begins a **start-up time delay period of 10 seconds** before pickleballs are thrown.
- ② **ELEVATION - (Electronic Elevation models only)**. Hold button UP or DOWN to automatically adjust the trajectory of shots.
- ③ **OSCILLATOR** - Depending on the model you have, push switch to **ON**, or **RANDOM** for sweeping shots across the court. On 2-Line oscillation models (**optional**), push switch to **2-LINE** for alternating shots to two preset positions (forehand & backhand).
- ④ **REMOTE CONTROL (optional)** To operate the **WIRELESS REMOTE** system, turn the remote switch on the panel to ON. On the hand-held transmitter, press the BALL FEED button to alternately stop and start the ball feed function. Press the OSC button to alternately stop and start the oscillation at the desired position on the court.
- ⑤ **SPIN CONTROL** - Turning clockwise from "FLAT" increases the amount of **Topspin** on shots. Turning counter-clockwise from "FLAT" increases the amount of **Backspin** on shots.
- ⑥ **INTERVAL** - Turning clockwise increases the frequency of ball throws from one ball every 10 seconds at the lowest setting to a ball every 1 second at the highest setting (for quick reaction volleys).
- ⑦ **BALL SPEED** - Turning clockwise increases the speed at which balls are thrown.
- ⑧ **BATTERY CHARGE JACK** (Battery model only) - Plug the Smart Battery Charger into this jack and a live AC outlet to charge the battery.

**RESET BUTTON** - See pg. 4