


RallyNet

Instructions



PARTS LIST

- 1 carry case with compartments
- 2 rectangular large end bases (1)
- 1 rectangular small center base (7)
- 1 vertical center support (T-shape) (6)
- 2 bent long oval pipes (3)
- 4 straight oval pipes (one end tapered) (5)
- 2 straight oval pipes (both ends tapered) (4)
- 2 straight oval pipes with end caps (2)
- 1 Rally net

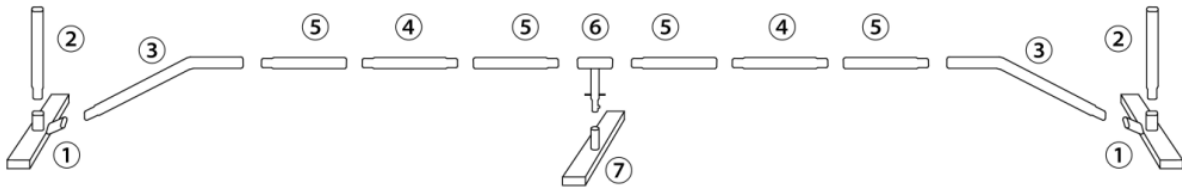

EASY TO ASSEMBLE

1. Assemble the horizontal poles first. Use the full net image as a reference.
2. Place 2 end bases approximately 22 feet apart.
3. Snap the 2-part center support together and place midway between both end bases.
4. Insert each bent pole and then connect 3 straight poles (with no end caps) on each side to center base.
5. Insert two vertical net post poles that have end caps into each end base. The frame is now completely assembled.
6. Slide net sleeves over each vertical net post.
7. Insert patented center strap rod through rectangular opening in center support base. Attach Velcro around small round vertical pole to secure.
8. Use adjustable net straps to create straight net appearance as shown in photo. To accomplish this, loop black adjustment straps through "D" ring and then back around pole to secure with Velcro at desired tension.
9. Your center strap height should now be at regulation 34 inches off the ground. At one foot inwards from the end of the net on each side, the net height should be a regulation 36 inches. To adjust this height, simply slide the net sleeve up or down as needed.

ADDITIONAL REFERENCE PHOTOS



www.PickleballCentral.com

U.S. Patent No. 9545551